

INSTRUCTIONS FOR HANDICAP AUTOMATIC DOOR

The ramp door is equipped with Handicap Automatic Push Buttons inside and outside. The Handicap Automatic Push Button will not work until the push bar is locked “open”. First, find the allen key wrench hanging to the right of the door. Insert the allen key into the hole in the door just to the right of the push bar. Push the push bar in and then turn the allen key clockwise 1/4 turn until the mechanism clicks. The push bar will remain in and the door latch will not engage. You will also need to access the switch at the top of the door to put it on “Automatic”. Test the system by pressing the handicap automatic push button.

When your function is finished, you need to turn the switch at the top of the door to “Off” and then release the push bar by inserting the allen key into the hole in the door and gently pushing on the push bar while turning the allen key 1/4 turn counter clockwise. The push bar will release and the latch should engage. Please ensure that the door is locked from the outside when you are leaving. Test the door - if you can open it, it is not locked.